

ROCKER SWITCH REPLACEMENT KIT

Please read complete instructions before replacing components.

Parts Included

Part #	Qty	Description
102092	1	SWITCH,ROCKER,RED,SPST120/220V
102093	1	SWITCH,ROCK,BLU,SPST120/220V
102094	1	SWITCH,ROCK,CLR,SPST120/220V
100188	1	SWITCH,ROCKER,ON/OFF,R/B
100189	1	SWITCH,ROCKER,OFF/MOM,SPST

Tools Required

Red Robertson Screwdriver
#2 Phillips Screwdriver

Assembly Instructions

1. Turn main power switch on distiller off and unplug cord from wall.
2. Using a Robertson and/or Phillips screwdriver, remove the distiller covers. This will require disconnecting the water feed line on 26-CT, 26D-8, 26C-8 and 26-14 models. **ENSURE THE SADDLE VALVE IS CLOSED BEFORE DISCONNECTING WATER FEED LINE.** If you are replacing an autodrain switch, remove the autodrain cover.
3. Compress the clips on the back of the switch to be replaced and push the switch out.
4. Remove the wires from one post on the old switch and attach them to the corresponding post on the new switch. **ENSURE THAT THE WIRES GO TO THE CORRECT POST.** Repeat for the other post(s).
5. Push the switch into the mounting slot until it snaps into position.
6. Replace distiller covers. Reattach water feed line if it was removed and open saddle valve.

The distiller should now operate properly. If it does not, confirm that the wires are connected to the proper location by referring to your electrical schematic. If they appear correct, we suggest you take your distiller to an authorized service representative.

